

OPENSWIM

User Guide

S700

Contents

HOW IT WORKS

Headphone Controls	03
ON/OFF	04
Transferring Content	05
How to Wear	07
Volume	08
Music Function	09
Check Battery Status	10

EXTRA FEATURES

 
EQ Modes	12
Switching EQ modes	13
Changing Languages	14
Changing Folder	15

CARE AND MAINTENANCE


Charging Tips	17
Warranty	18
Troubleshooting	19
What's in the Box	20

How It Works

Headphone Controls

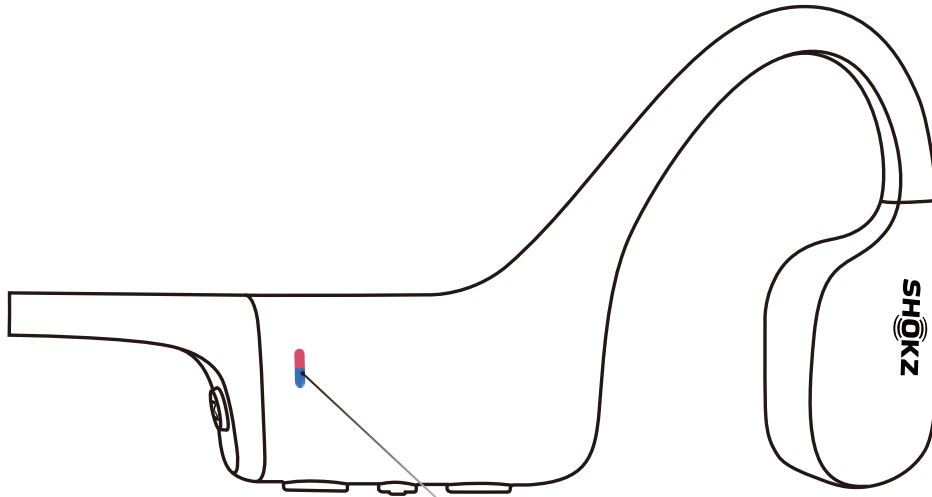


LED Indicator

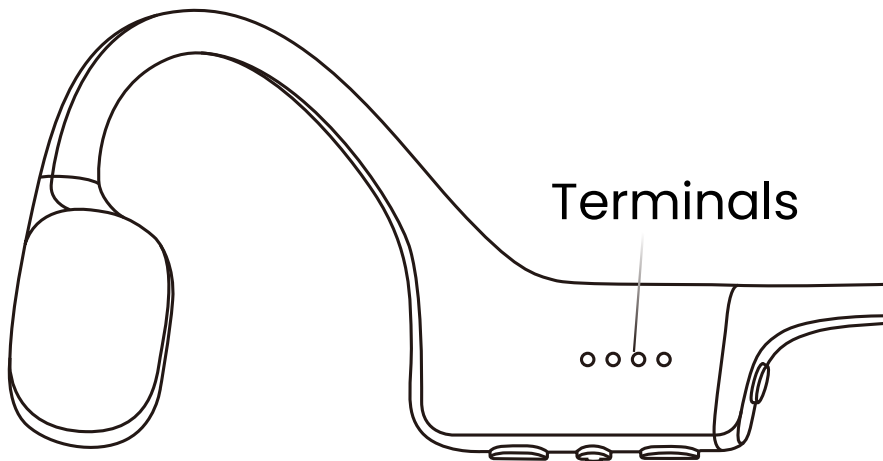 

Terminals

 
— Volume - + Volume+

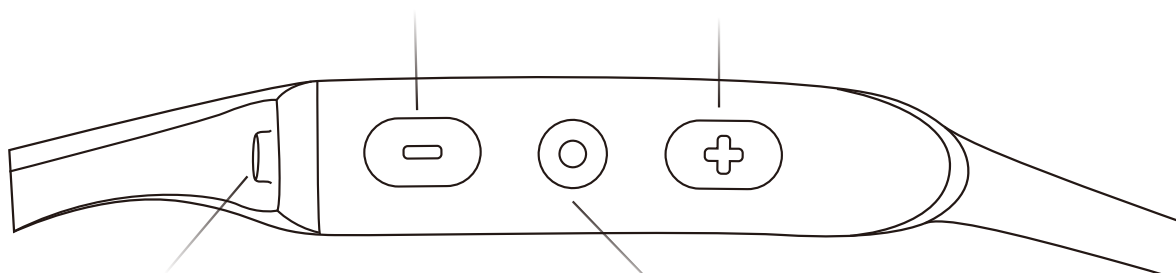

M Mode Button

● Multifunction/Power Button

 ON/OFF

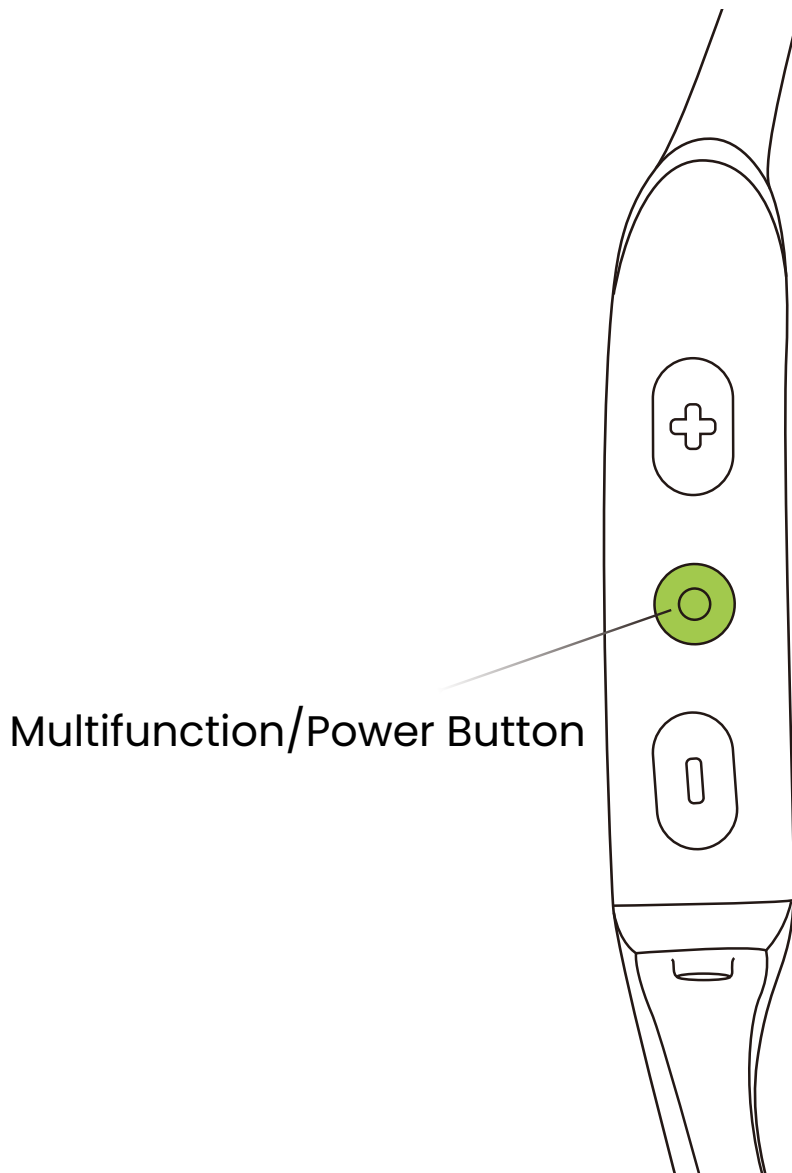

Turn on the headphones :

Press and hold the Multifunction/Power Button until the LED Indicator flashes blue.

 
*Audrey will say :“Welcome to Shokz”

Turn off the headphones :

Press and hold the Multifunction/Power Button until the LED Indicator flashes red.

*Audrey will say :“Power off”

Transferring Content

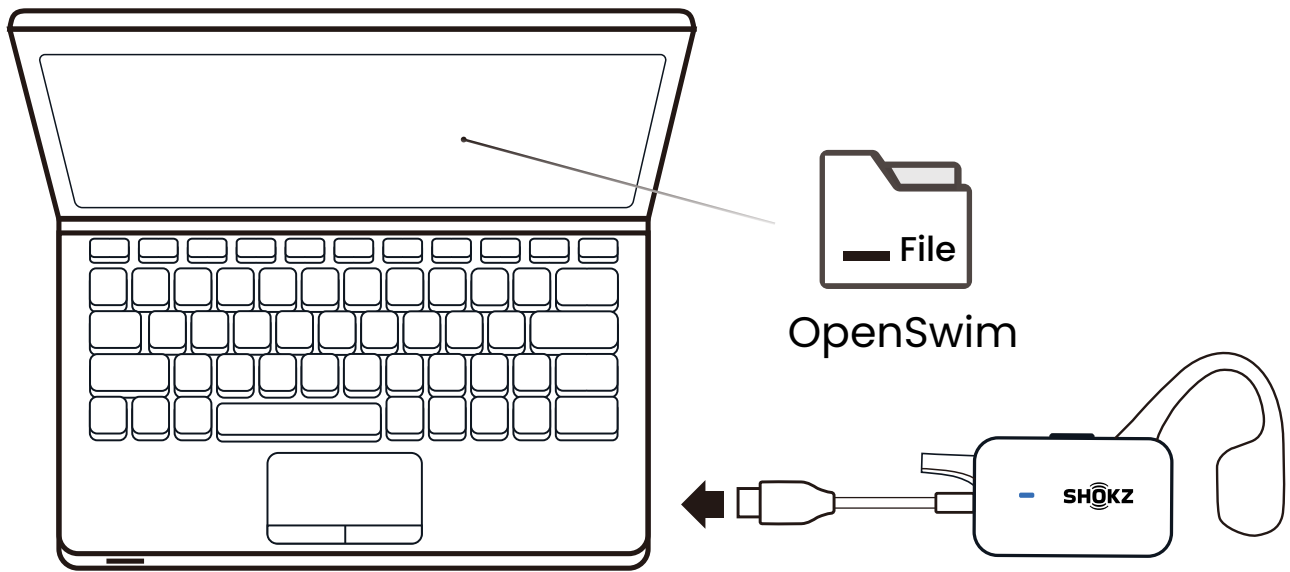

1. Connect OpenSwim to your computer.
2. OpenSwim will become a hard drive named "OpenSwim".
Open "OpenSwim" on your computer.

 


3. Drag-and-drop audio files or folders into the “OpenSwim” hard drive.

4. You may disconnect the USB Charging Cradle once file transfer is complete. The LED indicator will flash red and blue while OpenSwim organizes the files. The OpenSwim buttons are not functional temporally.

* OpenSwim supports MP3, WAV, WMA, FLAC, AAC formats.
(OpenSwim only supports WAV file in Linear PCM format.)

How to Wear

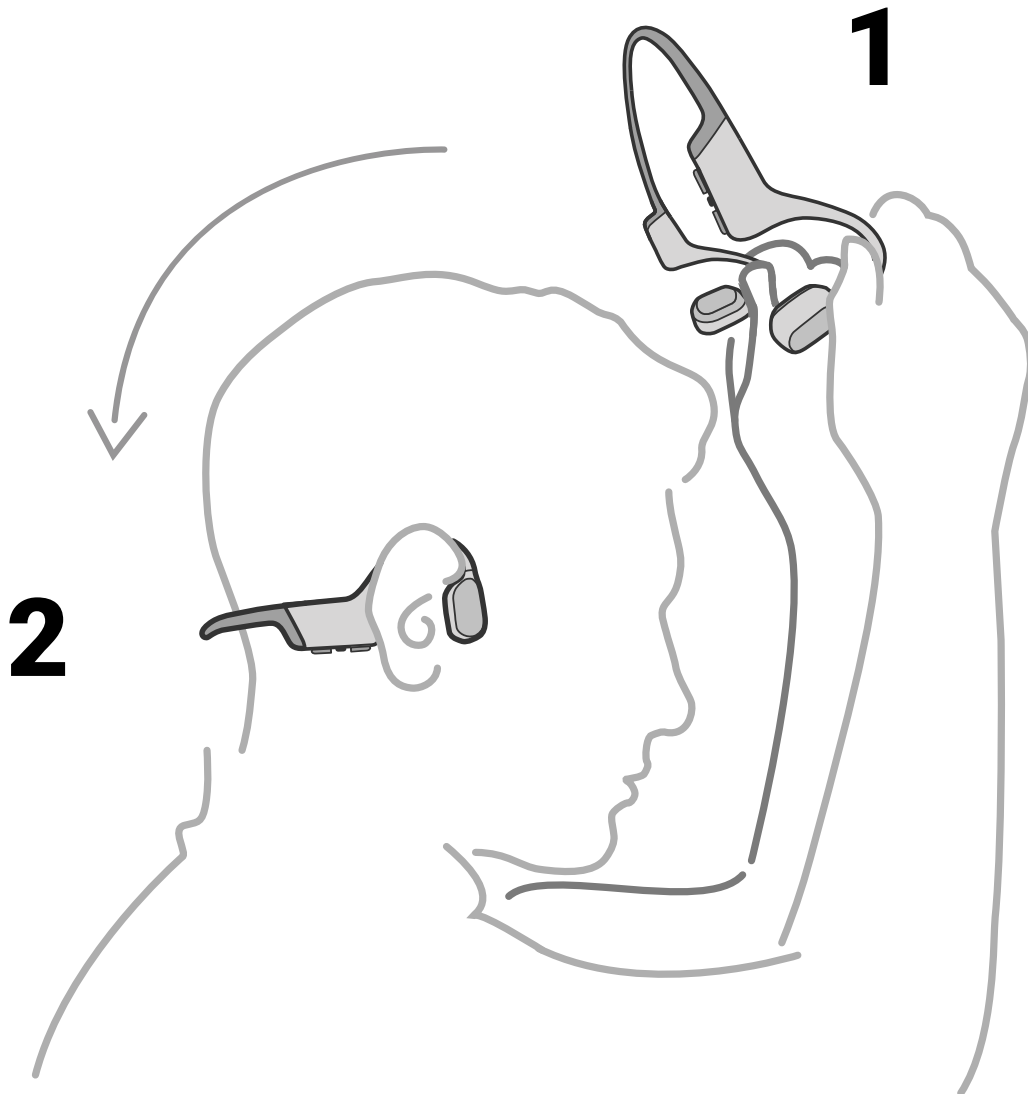


Pick up the headphones, bring them behind the back of the base of your neck, position the earhooks on your ears, then enjoy your music!

*Wearing your headphones the wrong way could cause discomfort. The transducers should rest in front of your ears.

Volume



 Operate volume controls while audio is playing.

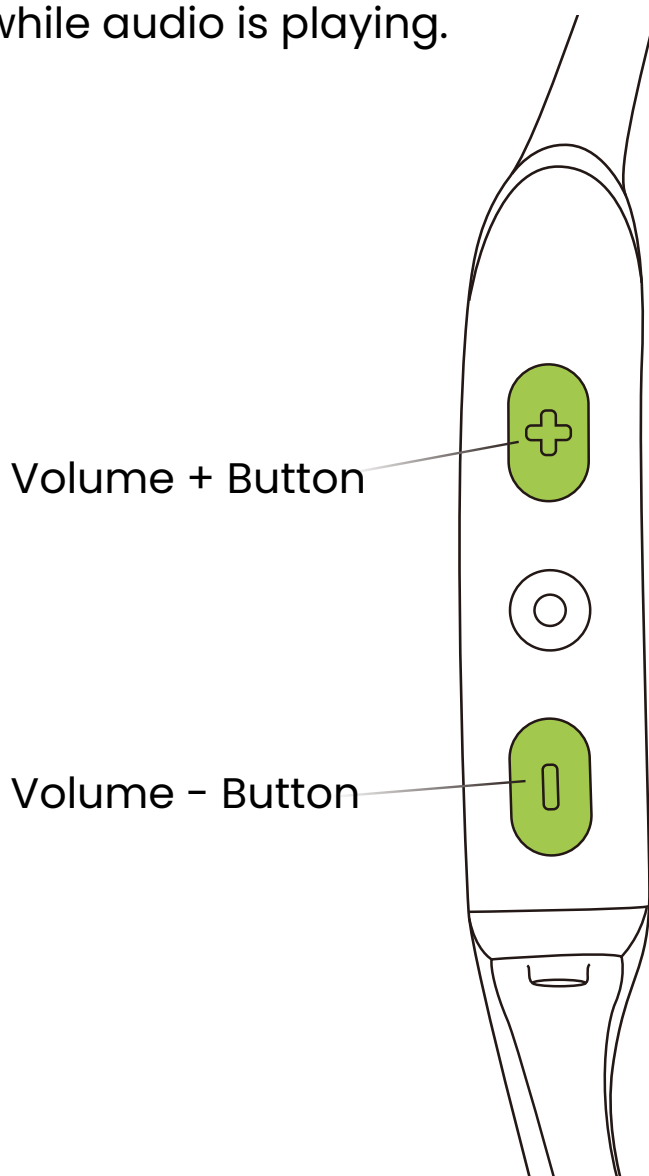

How to change volume:

 
While your audio is playing, adjust headphone volume by pressing either the volume + or volume - buttons.

*A “beep” will sound when the volume is at its max.



*Listening with headphones at high volume may affect your hearing and the audio will be distorted.

Music Function

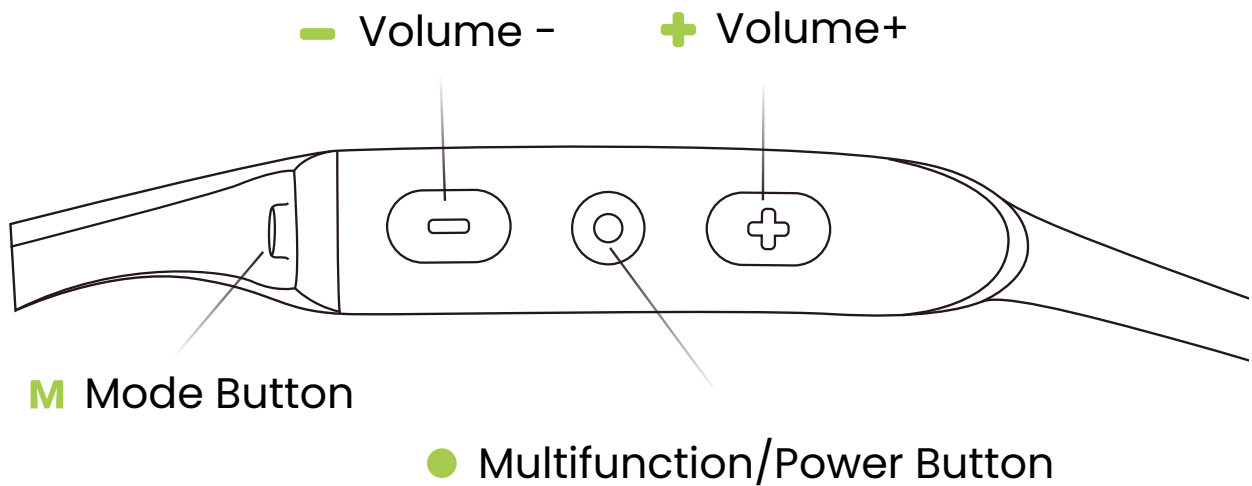

▶|| **Play/pause music** ●
Click Multifunction Button once

⏮ **Play mode** M
Click Mode Button once
"Normal/Repeat/Shuffle"

⏭ **Next song** +
Press and hold Volume+ for 2 seconds while music is playing

⏮ **Previous song** -
Press and hold Volume- for 2 seconds while music is playing

⏮ **Change EQ Setting** M
Press and hold Mode Button for 2 seconds

 
Check Battery Status



Operate controls while
audio is not playing

Volume + Button

Volume - Button

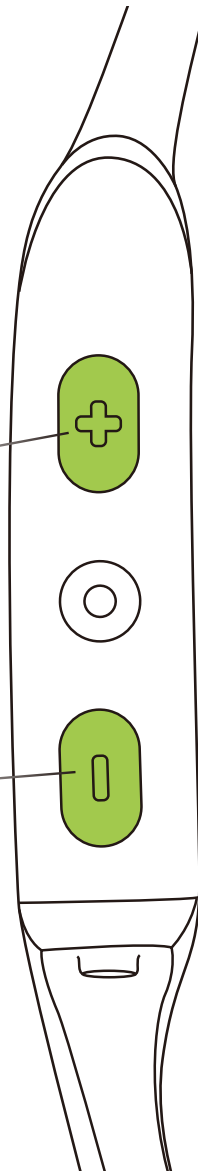

How to check battery status :

Click the volume + or volume - button while music is paused,
Audrey will tell you the battery status :

* "Battery high/Battery medium/Battery low/Charge me"

Extra Features

EQ Modes



General Mode :

Balanced frequency for listening to music



 
Swimming Mode :

For use while swimming


Switching EQ Modes



Operate controls while music is playing

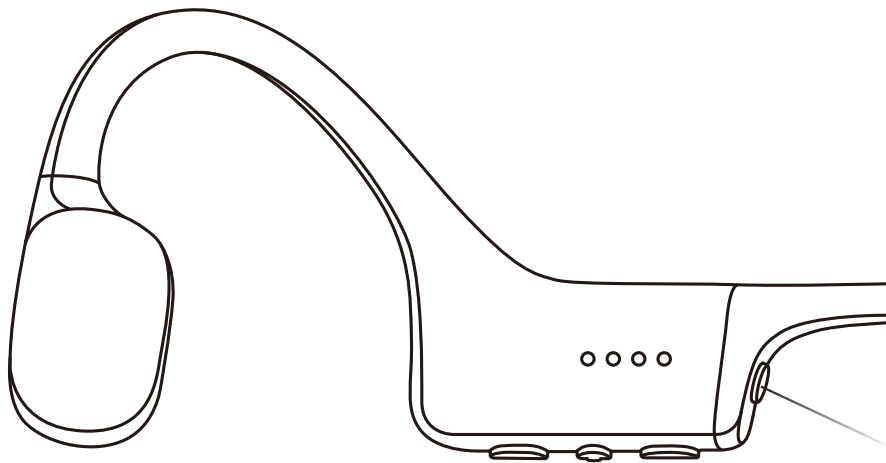

Mode Button

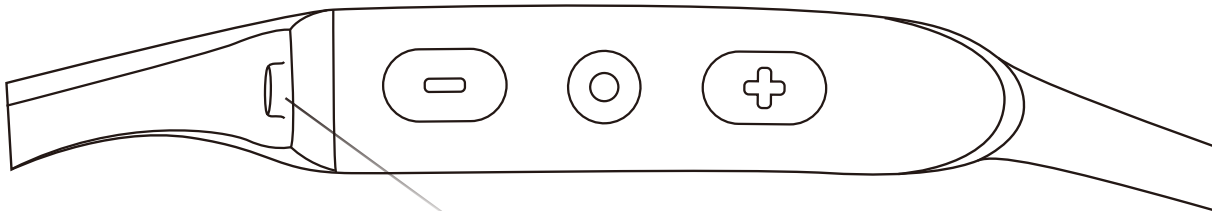 

Mode Button

 
How to switch EQ mode :

Press and hold Mode button while music is playing until you hear a beep.

*Audrey will say : "General mode/Swimming mode"

Changing Languages

Your headphones have four built-in languages:
Chinese, English, Japanese and Korean.

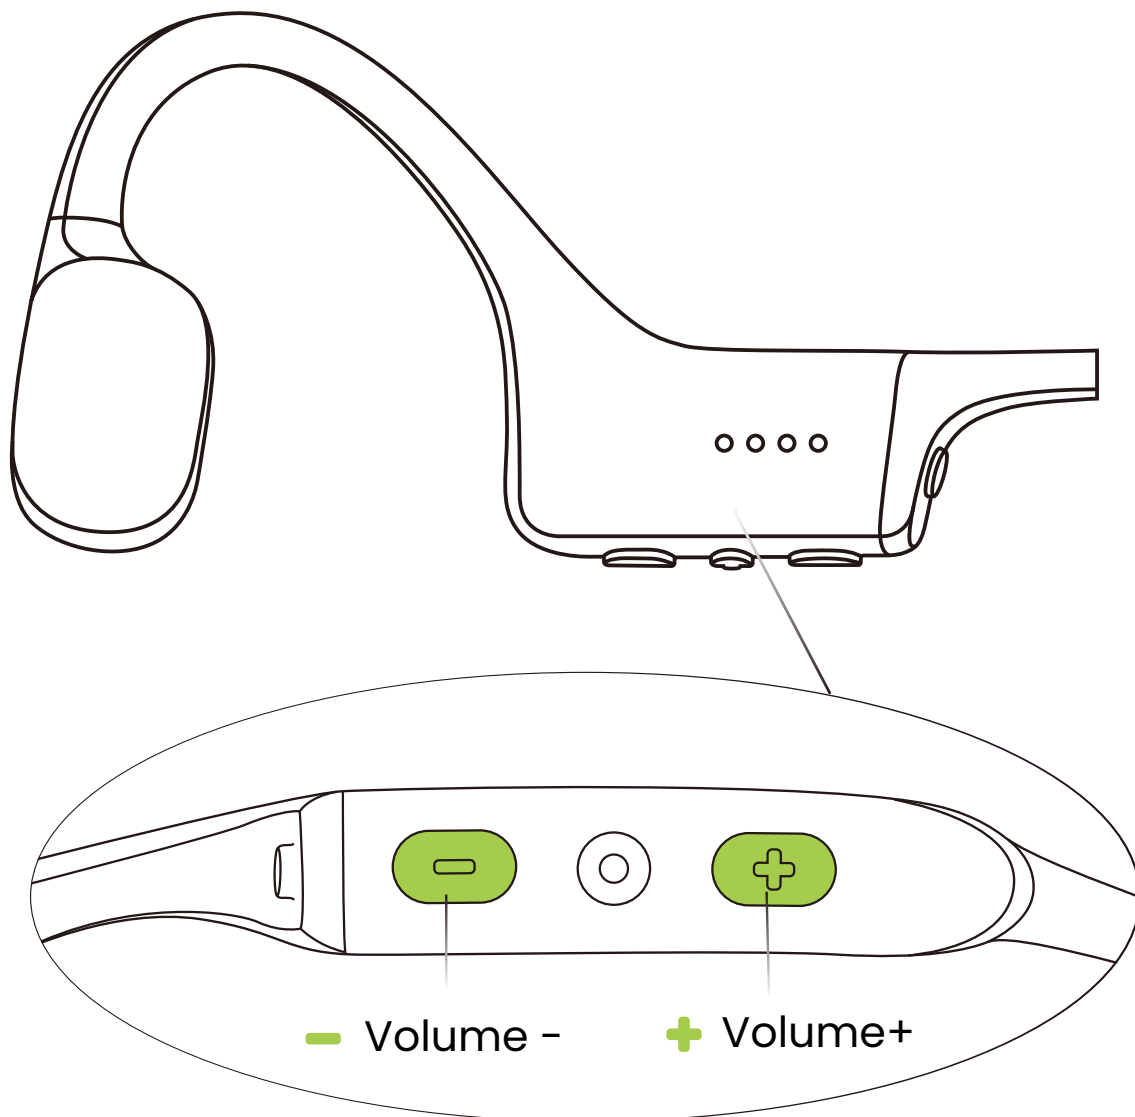


How to change the language :

Press and hold both button volume + and volume - until you hear a beep.

* Audrey will say : "中文/English/한국어/日本語"

Change the Folder

 *It is recommended to use different folders to categorize music.

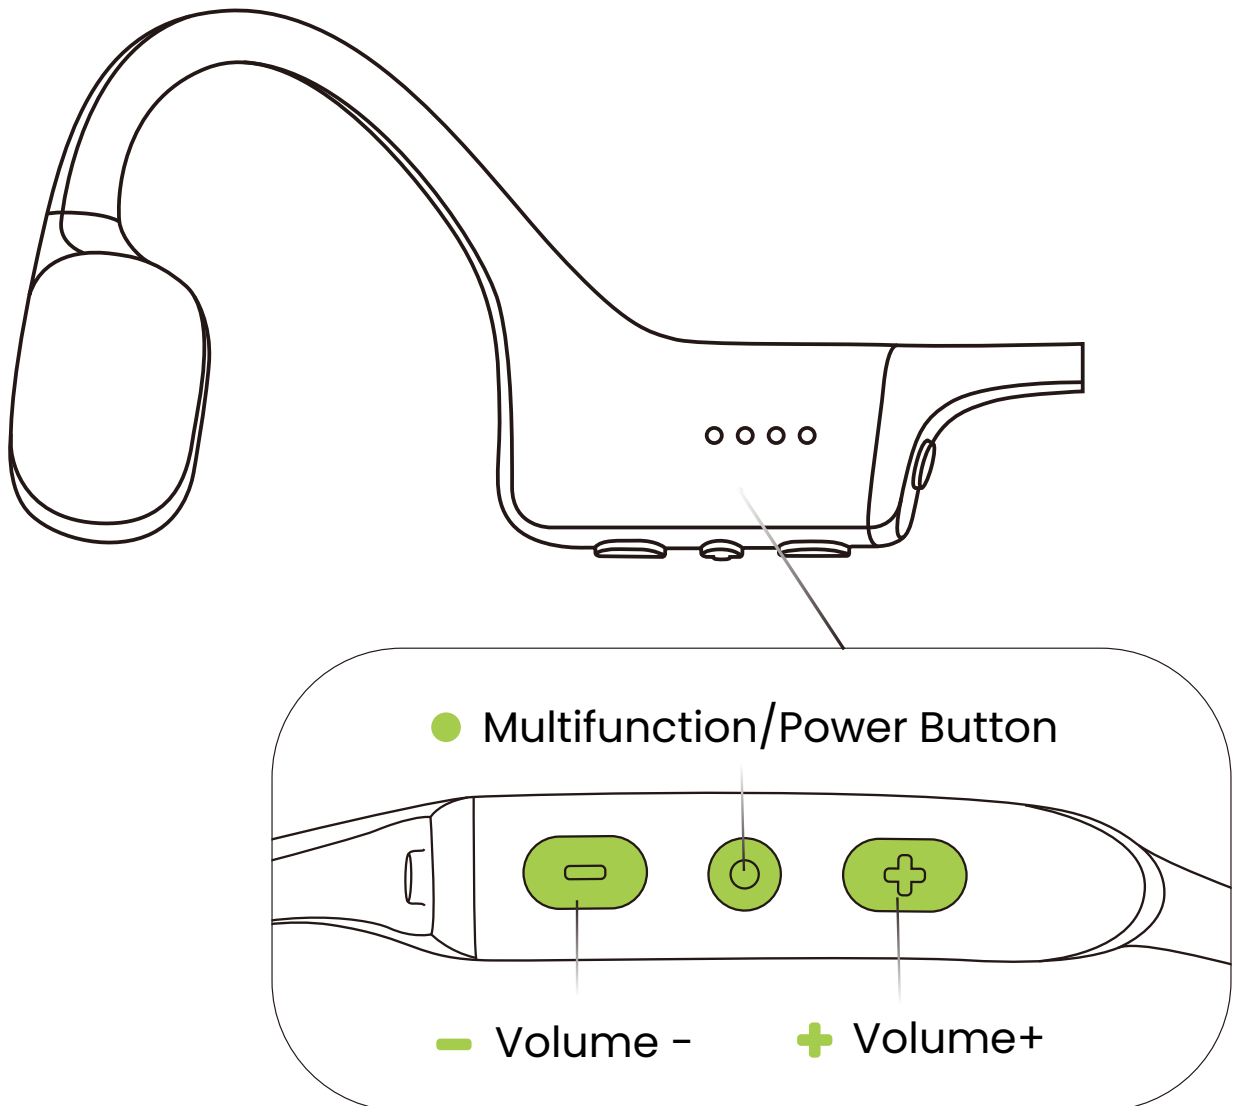

How to change the folder :

Press and hold both Multifunction Button and volume - until you hear a beep.

* Audrey will say :“Play Current Folder/Play All Folders”.

 
*Press and hold Volume + and Multifunction Button for 2 seconds after you hear” Play Current Folder”. You will then hear, “Next folder”.

Care and Maintenance

Charging Tips



The headphones will automatically shut down when charging

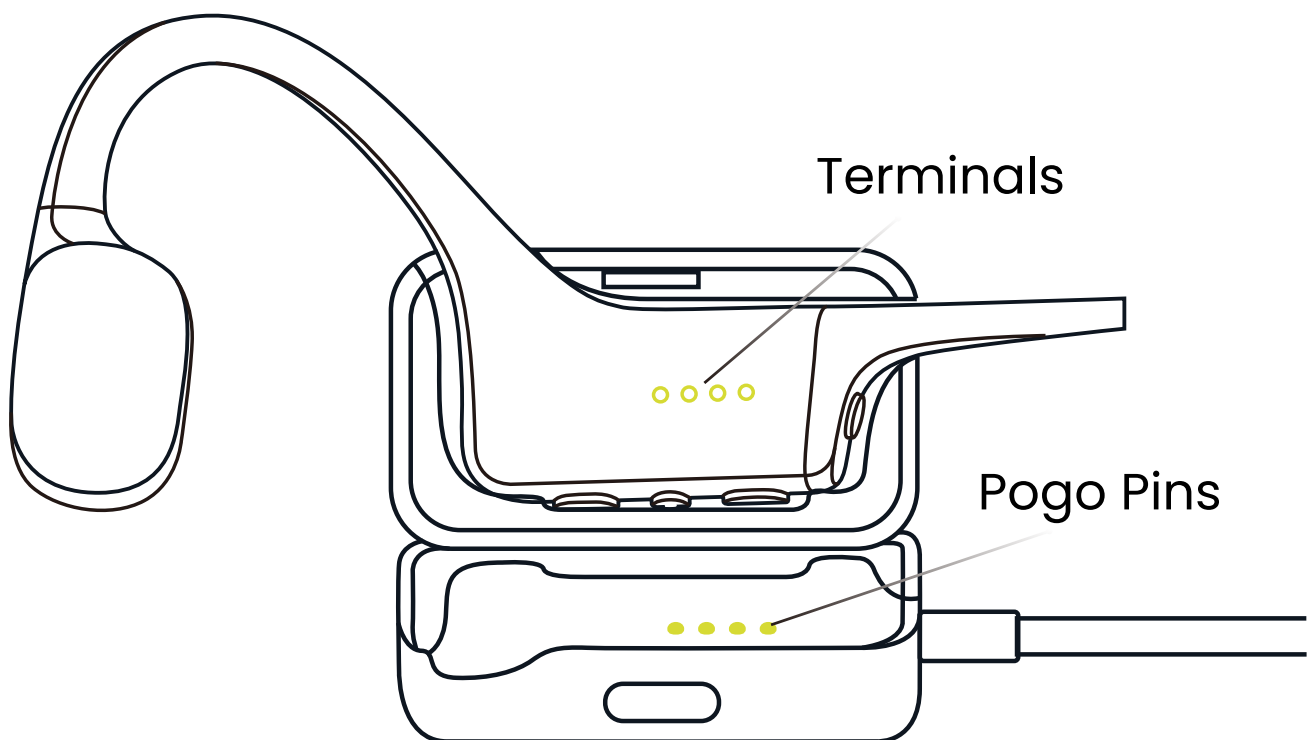

1. Attach OpenSwim to the USB Charging Cradle. Make sure that Pogo Pins and Terminals are in contact.
 2. Connect the cradle to a computer or an adapter.
- The LED indicator will turn blue when charging is complete.

Warranty

Your headphones are covered by a warranty.

Visit our website at

<https://www.shokz.com/pages/warranty-claim>

for details of the limited warranty.

 
*Failure to register will not affect your limited warranty rights.

Troubleshooting




If you have any trouble or problems, please visit
<https://www.shokz.com/pages/support-new>
for more support!

What's in the Box

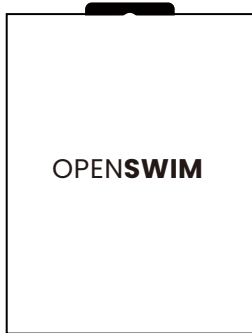


OpenSwim
Box

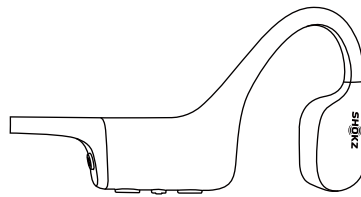 

OpenSwim
headphones



 
OpenSwim
Package

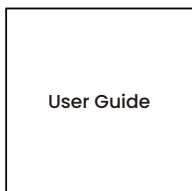


OpenSwim
User Guide



 OpenSwim
Legal Statement

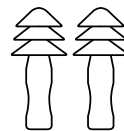

OpenSwim
Earplugs

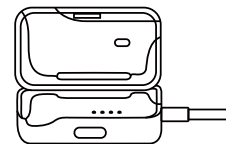 

OpenSwim
USB Charging
Cradle

If any part of your product is damaged or missing, do not use it. Contact authorized Shokz dealer or Shokz customer service.

*Please note that the packaging envelope may vary depending on the sales region.

SHOKZ