


AEROPEX

User Guide

01

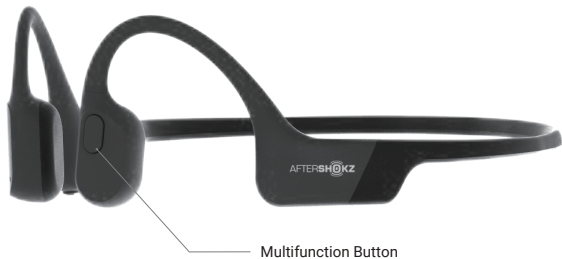

Multifunction Button

Microphone 2

Microphone 1

LED Indicator

Power/Volume+ Button

Volume- Button

Magnetic Charging Port



How to Set Up Aeropex

1. Charge


Charge the headphones with the included magnetic charging cable. The LED indicator will turn from red to blue when charging is complete.

2. Pair

Start with your headphones powered off. Enter pairing mode by pressing and holding volume+ until the LED indicator flashes red and blue.

3. Connect


Open your device's Bluetooth® settings and select "Aeropex by AfterShokz." Audrey says "connected" and the LED indicator will flash blue.

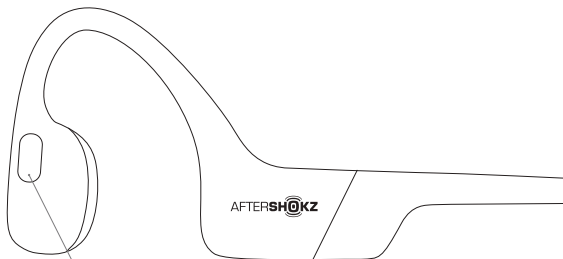

AFTERSHOKZ


A Multifunction

04

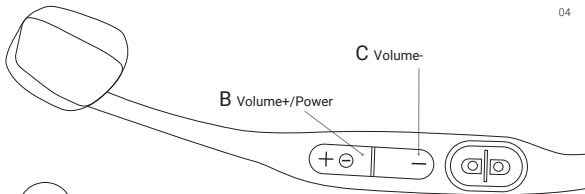

C Volume-

B Volume+ / Power

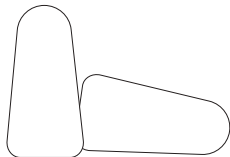

D Earplugs

Multifunction Button (A)

Function	Action	Prompt/Audrey Says
Play/pause music	Click once	One beep
Next song	Double-click while music is playing	One beep
Previous song	Triple-click while music is playing	One beep
Answer call	Click once	Two beeps
End call	Click once	One beep
Answer call waiting and end current call	Press and hold for 2 seconds	One beep
Ignore a call	Press and hold for 2 seconds	Two beeps
Activate voice assistant	Press and hold for 2 seconds	Device beeps
Redial last number	Double-click on standby	"Redial last number"

Power/Volume+ (B); Volume- (C)

Function	Action	Prompt/Audrey Says
Power on	Press and hold volume+ for 2 seconds	Welcome to AfterShokz
Power off	Press and hold volume+ for 3 seconds	Power off
Mute	Press and hold volume+ and volume- buttons for 2 seconds while on a call	Mute on/Mute off
Change EQ setting	Press and hold volume+ and volume- buttons for 2 seconds while music is playing	EQ changed
Check battery status	Click the volume+ or volume- button while music is paused	Battery high/Battery medium/Battery low/Charge me"
Adjust volume	Click the volume+ or volume- button to adjust volume while music is playing	One beep

06

Specifications

Part number	AS800	Frequency response	20Hz~20kHz
Speaker type	Bone conduction transducer	Sensitivity	105 ± 3dB
Bluetooth® version	Bluetooth® v5.0	Microphone	-38dB ± 3dB

Wireless range	10 m	Battery	Li-Polymer battery
Compatible profiles	A2DP, AVRCP, HSP, HFP	Weight	26 g
Continuous play	Up to 8 hours	Standby time	Up to 10 days
Charge time	2 hours	Warranty	2 years
Frequency band	2402MHz~2480MHz	Maximum RF output power	5dBm
Charge voltage	5V±5%	Water resistance	IP67
Battery capacity	145 mAh		

LED Indicator

Solid red	Charging
Solid blue	Charging complete
Flashes red and blue	Pairing mode
Flashes blue	Incoming call
Flashes red every 2 minutes	Low battery

Multipoint Pairing

Multipoint Pairing allows Aeropex to be connected to two devices, allowing users to seamlessly transition between the two.

1. Start with your headphones powered off.
2. Press and hold volume+ the LED indicator flashes red and blue.
3. Press and hold the Multifunction Button and Power/Volume+ Button for 3 seconds.
Audrey says "multipoint enabled."
4. Open your first device's Bluetooth® menu and select "Aeropex by AfterShokz."
Audrey says "connected".
5. Turn your headphones off.
6. Re-enter pairing mode by pressing and holding the Power/Volume+ Button the LED indicator flashes red and blue.
7. Open your second device's Bluetooth® menu and select "Aeropex by AfterShokz."
Audrey says "connected."
8. Turn your headphones off.
9. Turn your headphones on. Your headphones are now connected to both devices.
10. To turn off the Multipoint Pairing function: Repeat Step 1 and 2. Then press and hold the Multifunction Button and Volume- Button for 3 seconds until you hear "multipoint disabled."

08

Moisture Detection Alarm

These headphones can detect liquid such as water, sweat, and rain. If the headphones are plugged into the charger while wet, the LED indicator will flash red and blue. The headphones will also vibrate and emit a beep. If this happens, remove the charging cable from the headphones, dry them completely and then proceed with charging.

How to Reset Your Headphones

1. Start with your headphones powered off.
2. Enter pairing mode by pressing and holding volume+ until the LED indicator flashes red and blue.
3. Press and hold the Multifunction Button, Power/Volume+ Button, and Volume- Button (all three buttons) simultaneously for 3-5 seconds, until you hear two beeps or feel vibrations.
4. Turn your headphones off. Aeropex is now reset and can be re-paired to your device.

Optional Accessories

09

Earplugs (D)

Use with headphones in environments where it is safe to block out ambient noise, such as on a train or airplane.

1. Roll earplugs firmly between fingers and place in ears.
2. While music is playing to adjust EQ settings to reduce or enhance bass while wearing earplugs, press and hold volume+ and volume- buttons simultaneously.
3. Switch EQ to original setting when you take out the earplugs.

Manufacturer

AfterShokz LLC

3200 Gracie Kiltz Lane, Suite 400 Austin, TX 78758

AFTERSHOKZ